


The Leading Centrifuge


for Process Applications - A-Series

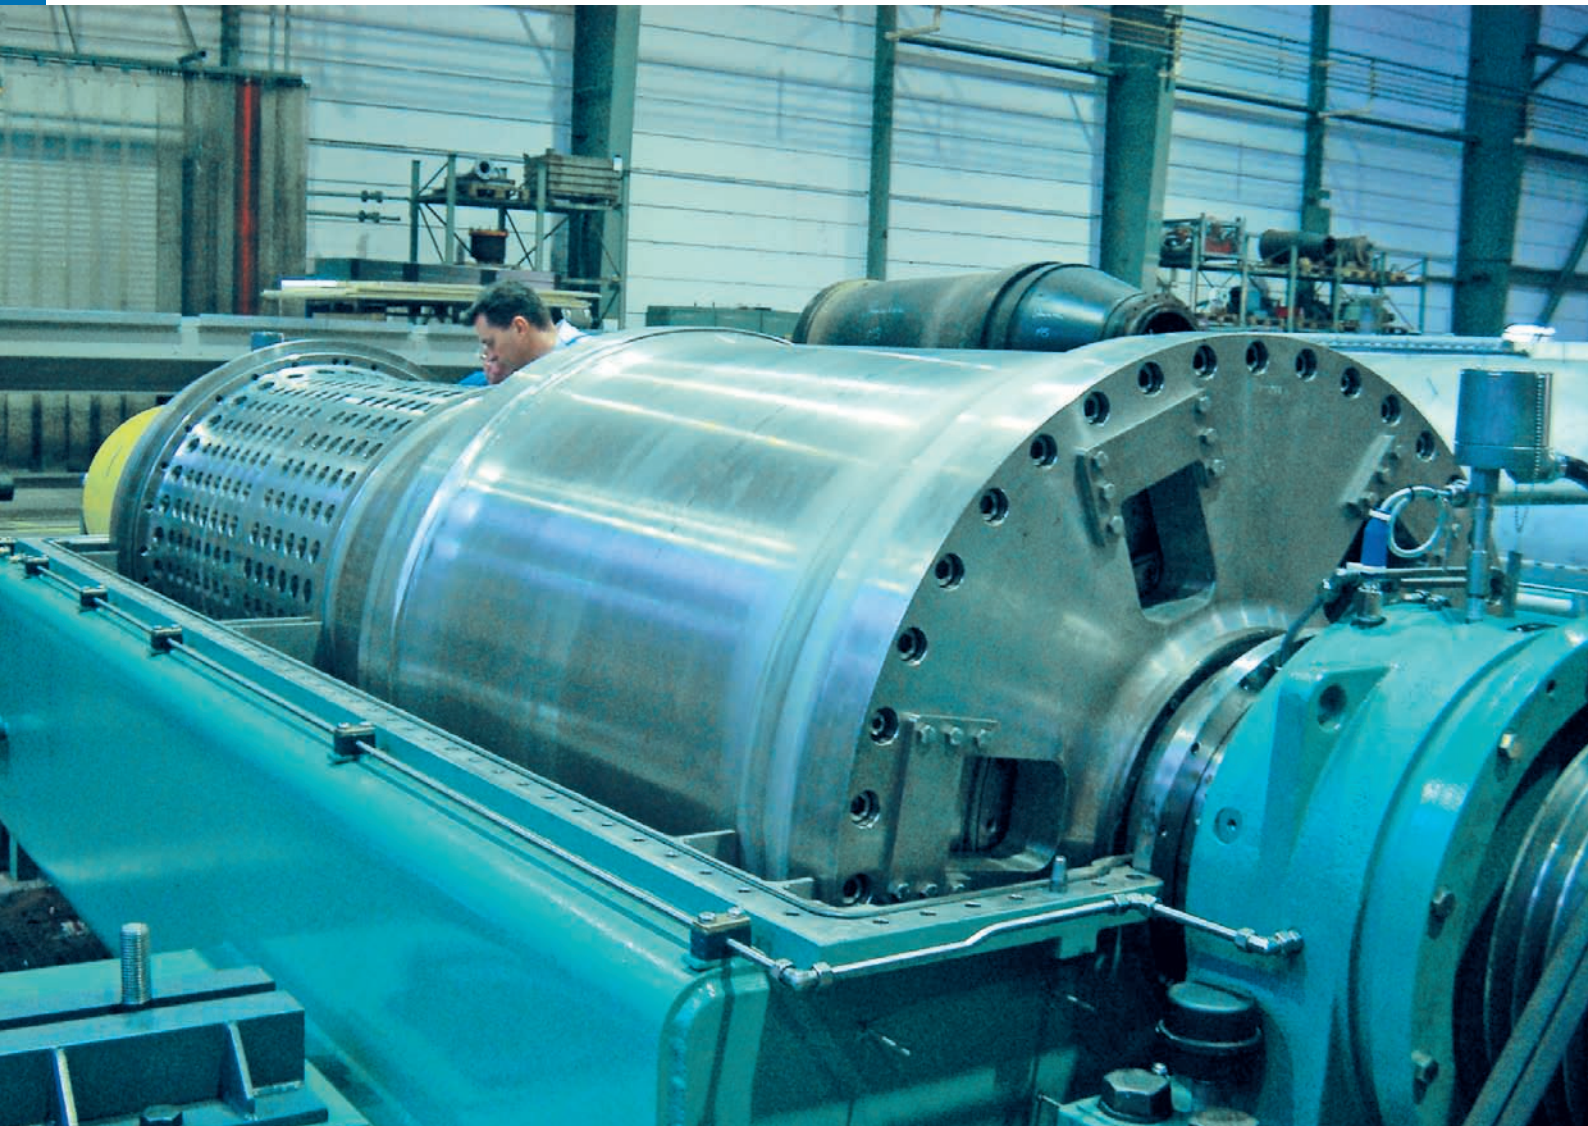

The ANDRITZ Decanter – A-Series

The Optimum Process Centrifuge for almost any Application

With more than 15.000 installed machines ANDRITZ is one of the leading suppliers of decanter centrifuges. The comprehensive product portfolio also comprises the acquired product range of Humboldt and Bird Machine. ANDRITZ can offer an optimum machine for almost all process application (A-Series) up to 1.4 m diameter. The robust design of the machines allows a service life time of several decades.

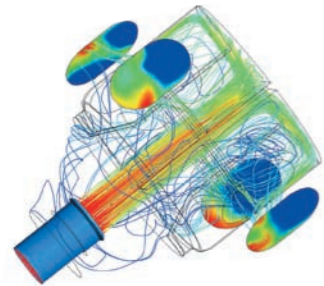

Optimum feed chamber design for highest production




Feed Champer option
Patented accelerator XL Plus


Customized Design

Drive


- direct with VFD

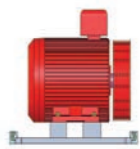

- with fluid couplung

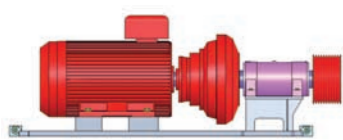

- with special drive for CIP-Cleaning

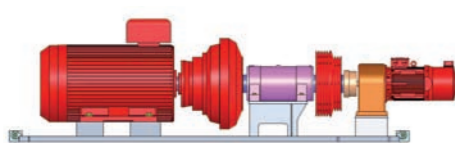

Housing

- atmospheric/
seal up to 0,01 bar



- gastight up
to 0,5 bar




- pressure tight




Optimized Design

- single, double or triple lead conveyor
- optimized bearings and seals
- rigid design to minimize vibrations

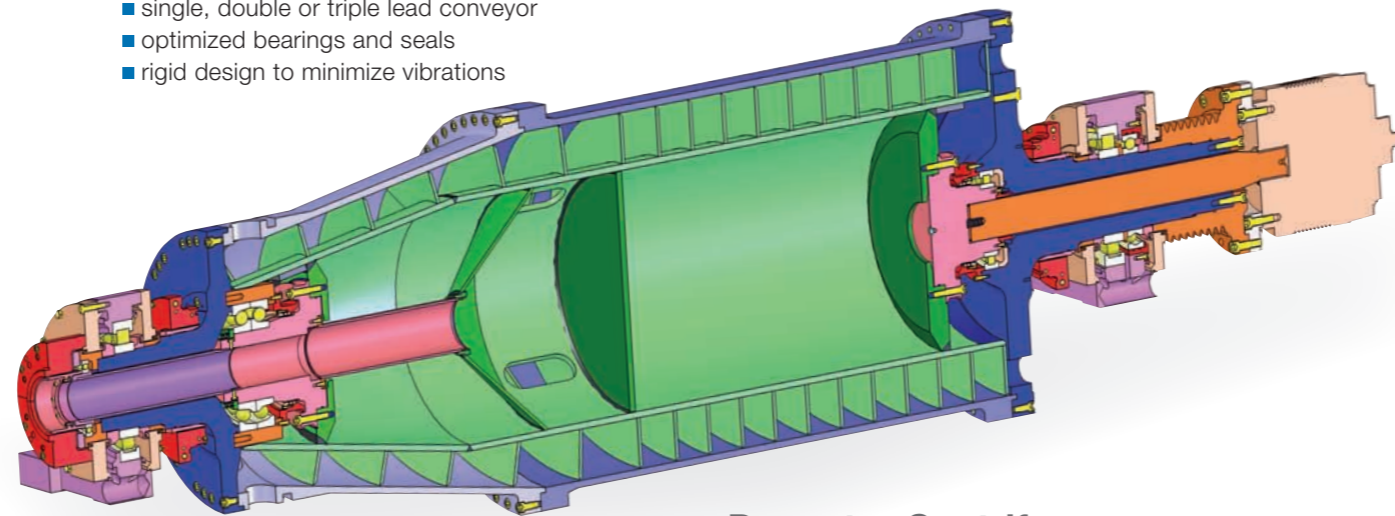


Decanter Centrifuges

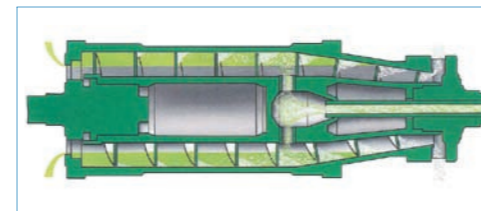

Solid-bowl decanter centrifuge – Type A

The solid-bowl decanter is the basic, standard machine to separate solid and liquids. Typical applications are all kind of plastic material (PVC, HDPE, PTA) but also for CaCO₃, Kaolin, drill mud, tunnel drilling and various residues.

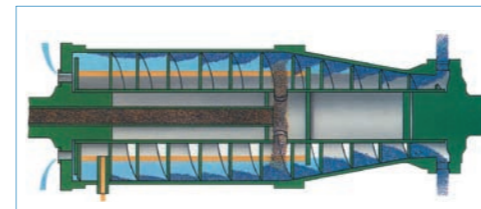


3-phase-decanter

This machine is used when not only a solid must be separated from the liquid but when the liquid contains two phases of differing densities. Besides treatment of oil and fats such machines are used to recover oil from tank cleaning operation (stop oil).


Your benefit

- optimized scroll geometry for numerous applications
- process experience from a large number of reference installations
- in stainless steel, hastelloy, titanium or nickel
- optimized wear protection for abrasive media
- solid and robust design for demanding operating conditions
- also for gas-tight and pressurized operation
- heavy duty gearbox up to 120000 Nm
- OEM service available worldwide

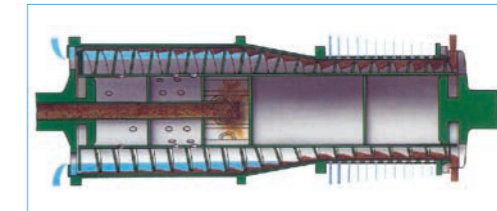

Screen-bowl decanter centrifuge – Type AS


Screen-bowl decanters discharge crystalline solids over the conical section. These are transported along a cylindrical screen section, where the solids are further dewatered – combining the steps of sedimentation and filtration in one machine. Where advantageous, the solids can be washed on the screen. The most common applications are potash, fine coal and BPA.

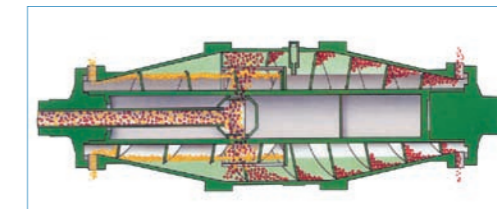


CENSORTM solids-sorting centrifuge – Type AC

The CENSORTM centrifuge is used to selectively separate plastic fractions of differing densities. During the process, the product is washed using a minimal quantity of water. The resulting recycled products are then available for high-quality reuse.

Wear protection

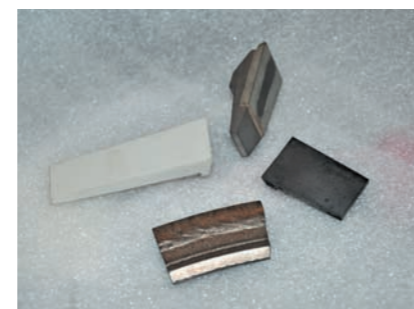


Basket Centrifuges

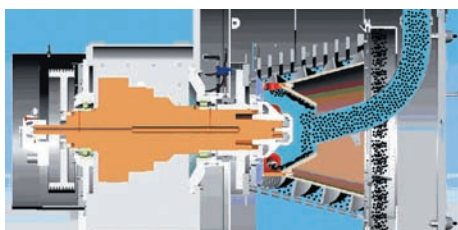

Screen Scroll Centrifuge – Type AH

The Screen Scroll Centrifuge is used to separate (and eventually wash) medium coarse particles (> 0,2 mm) like salt, coal and potash. A scroll is used to transport the solids along the screen basket.

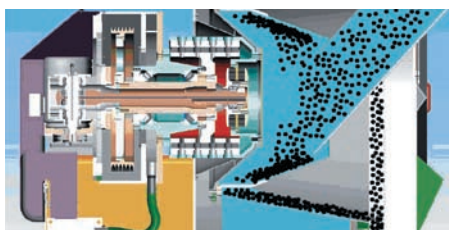

Vibrating Screen Centrifuge – Type AES

The Screen Scroll Centrifuge is used to separate (and eventually wash) medium coarse particles (> 0,2 mm) like salt, coal and potash. A scroll is used to transport the solids along the screen basket.

Typical applications

Plastics: PVC, HDPE, PTA, PBA, Melamin

Anorganic Chemicals: Potash, salts, gypsum, soda

Ores and Minerals: Coal, CaCO₃, kaolin, uranium, copper

Residues: Drill mud, tunnel drilling, slop oil, tailings

GERMANY

ANDRITZ Separation GmbH
Phone: +49.221.9856-107
Fax: +49.221.9856-202
e-mail: separation.de@andritz.com

ENGLAND

ANDRITZ Ltd.
Phone: +44.1782.565656
Fax: +44.1782.5661-30
e-mail: separation.uk@andritz.com

FRANCE

Andritz S.A.S.
Phone: +33.139.26-0550
Fax: +33.139.26-0560
e-mail: separation.fr@andritz.com

RUSSIA

ANDRITZ Representative Office Moscow
Phone: +7.499.940-4182
Fax: +7.499.940-4186
e-mail: separation.msk@andritz.com

SPAIN

ANDRITZ Ingenieria S.A.
Phone: +34.91.663-6409
Fax: +34.91.651-1931
e-mail: separation.es@andritz.com

ITALY

ANDRITZ HYDRO s.r.l.
Phone: +39.0385.43645
Fax: +39.0385.759145
e-mail: separation.it@andritz.com

USA

ANDRITZ Separation Inc.
Phone: +1.817.465-5611
Fax: +1.817.468-3961
e-mail: separation.us@andritz.com

CHILE

ANDRITZ Chile Ltda.
Phone: +56.2.462-4600
Fax: +56.2.462-4646
e-mail: separation.cl@andritz.com

SOUTH AFRICA

ANDRITZ (Pty.) Ltd.
Phone: +27.11.4550107
Fax: +27.11.4550146
e-mail: separation.za@andritz.com

CHINA

ANDRITZ Technologies Ltd.
Phone: +86.757.8296-9222
Fax: +86.757.8296-9289
e-mail: separation.cn@andritz.com

SINGAPORE

ANDRITZ Singapore Pte. Ltd.
Phone: +65.6512.1800
Fax: +65.6863.4482
e-mail: separation.sg@andritz.com

INDIA

ANDRITZ Separation (India) Private Ltd.
Phone: +91.44.4399-1111
Fax: +91.44.2653-5103
e-mail: separation.in@andritz.com

AUSTRALIA

ANDRITZ Pty Ltd.
Phone: +61.2.4975-3633
Fax: +61.2.4975-3405
e-mail: separation.au@andritz.com

BRAZIL

ANDRITZ Separation Industria e Comercio de Equipamentos de Filtracao Ltda.
Phone: +55.47.3387-9100
Fax: +55.47.3387-9103
e-mail: separation.bra@andritz.com

AUSTRIA

ANDRITZ AG
Phone: +43.316.6902-2318
Fax: +43.316.6902-463
e-mail: separation@andritz.com

www.andritz.com